

---

# Content

---

---

## Section 1

### Introduction ..... 1-1

---

1.1	Overview of Basic System .....	1-1
1.1.1	Hardware Features .....	1-1
1.1.2	Software Features .....	1-2
1.2	About this Manual .....	1-2
1.2.1	Terms Used in this Manual .....	1-2
1.3	Compatible Products .....	1-3
1.4	How to Contact Silent Knight .....	1-4
	Limitations of Fire Alarm Systems .....	1-5
	Requirements and recommendations for proper use of fire alarm systems including smoke detectors and other fire alarm devices: .....	1-7

## Section 2

### Agency Listings, Approvals, and Requirements ..... 2-1

---

2.1	Federal Communications Commission (FCC) .....	2-1
2.2	Underwriters Laboratories (UL) .....	2-2
2.2.1	Requirements for All Installations .....	2-2
2.2.2	Requirements for Central Station Fire Alarm Systems .....	2-2
2.2.3	Requirements for Local Protected Fire Alarm Systems .....	2-2
2.2.4	Requirements for Remote Station Protected Fire Alarm Systems - Digital Alarm Communicator Transmitter (DACT) .....	2-2

## Section 3

### Before You Begin Installing ..... 3-1

---

3.1	What's in the Box? .....	3-1
3.2	Environmental Specifications .....	3-1
3.3	Electrical Specifications .....	3-2
3.4	Wiring Specifications .....	3-3
3.5	Board Assembly Diagram .....	3-5
3.6	Calculating Current Draw and Standby Battery .....	3-5
3.6.1	Worksheet Requirements .....	3-5
	Filling in the Current Draw Worksheet, Table 3-2 (Section 3.6.2) .....	3-5
3.6.2	Current Draw Worksheet .....	3-7
	3.6.2.1 Maximum Battery Standby Load .....	3-9
3.7	Installation Tasks Overview .....	3-10

## Section 4

# Control Panel Installation ..... 4-1

---

4.1	Mounting the Control Panel Cabinet .....	4-1
4.1.1	Removing the IFP-1000 Assembly from the Housing .....	4-1
4.2	AC Connection .....	4-2
4.3	Battery Connection .....	4-3
4.3.1	AB-33 Accessory Cabinet .....	4-4
4.3.1.1	Installing the AB-33 Accessory Cabinet and Batteries.....	4-4
4.4	SBUS Wiring .....	4-6
4.4.1	Calculating Wiring distance for SBUS modules .....	4-6
	Wiring Distance calculation example: .....	4-8
4.4.2	Wiring Configurations .....	4-9
4.5	Remote Annunciator RA-1000 Installation .....	4-10
4.5.1	Mounting the RA-1000 .....	4-11
4.5.1.1	Flush Mounting .....	4-12
	Flush Mounting with an Electrical Box .....	4-13
	Flush Mounting Steps .....	4-13
4.5.1.2	Surface Mounting.....	4-14
4.5.2	Model RA-1000 Connection to the Panel .....	4-15
4.6	RA-100 Remote Annunciator Installation .....	4-16
	RA-100 installation involves the following steps:.....	4-16
4.6.1	Mounting the RA-100 .....	4-17
4.6.1.1	Flush Mounting .....	4-17
	Follow these steps to flush mount the RA-100 .....	4-17
4.6.1.2	Surface Mounting.....	4-19
4.7	5815XL Installation .....	4-20
4.7.1	5815XL Connection to the Panel .....	4-21
4.8	5824 Serial/Parallel Interface Installation .....	4-22
4.8.1	Selecting 5824 Options .....	4-23
	Printer and Output Port Options.....	4-24
4.9	5880 LED Driver Module .....	4-25
4.9.1	5880 Board Layout .....	4-25
4.9.2	FACP Connection .....	4-26
4.9.3	LED Wiring .....	4-27
4.9.4	Dry Contact Wiring .....	4-28
4.10	5865-3 / 5865-4 LED Annunciator Installation .....	4-29
4.10.1	FACP Connection .....	4-30
4.10.2	5865 Mounting .....	4-31
4.11	Configuring Modules .....	4-33
4.11.1	Assigning Module IDs .....	4-33
4.12	Telephone Connection .....	4-34
4.12.1	Ground Start Relay (Model 5211) .....	4-34
4.13	Flexputs™ I/O Circuits .....	4-35
4.13.1	Conventional Notification Appliance .....	4-35
4.13.1.1	Class B Notification Wiring.....	4-35
4.13.1.2	Class A Notification Wiring .....	4-36
4.13.2	Conventional Input Switch Circuits .....	4-38
4.13.2.1	Class B Inputs .....	4-38
4.13.2.2	Class A Inputs .....	4-39
4.13.3	Installing 2-Wire Smoke Detectors .....	4-40
4.13.3.1	Installing 2-Wire Class B Smoke Detectors .....	4-40

4.13.3.2	Installing 2-Wire Class A Smoke Detector.....	4-41
4.13.4	Installing 4-Wire Smoke Detectors .....	4-42
4.13.4.1	Installing a Class B 4-Wire Smoke Detector .....	4-42
4.13.4.2	Installing 4-Wire Class A Smoke Detectors .....	4-43
4.13.5	Auxiliary Power Installation .....	4-44
4.13.5.1	Door Holder Power .....	4-44
4.13.5.2	Constant Power .....	4-44
4.13.5.3	Resettable Power.....	4-45
4.14	On-Board Relays (Conventional) .....	4-45
4.14.1	Trouble Relay .....	4-45
4.14.2	Programmable Relays .....	4-45
4.15	Remote Station Applications .....	4-46
4.15.1	Keltron Model 3158 Installation .....	4-46
4.15.2	City Box Connection Using the 5220 Module .....	4-48
4.15.3	NFPA 72 Polarity Reversal .....	4-49
4.15.3.1	Using the 5220 Module.....	4-49
4.15.4	Using the SD500-ARM Addressable Relay Module .....	4-50
4.15.5	Using a MR-201/T Control Relay From Air Products .....	4-51

## **Section 5**

### **SLC Device Installation .....** 5-1

---

5.1	Types of SLC Devices .....	5-1
5.2	Maximum Number of Devices .....	5-2
5.3	Wiring Requirements for SLC Devices .....	5-2
5.3.1	Wiring 5815XL in Style 4 (Class B) Configuration .....	5-2
5.3.2	Wiring 5815XL in Style 6 & 7 (Class A) Configuration .....	5-4
5.4	Heat and Smoke Detector Installation .....	5-5
5.4.1	Wiring .....	5-5
5.5	Duct Detector Installation .....	5-6
5.6	Input Monitor Module (SD500-AIM) .....	5-7
5.7	Mini Input Module (SD500-MIM) .....	5-8
5.8	Relay Module Installation .....	5-9
5.8.1	Electrical Specifications .....	5-9
Relay Ratings .....	5-9	
5.8.2	Wiring .....	5-9
5.9	SD500-ANM Installation Instructions .....	5-10
5.9.1	SD500-ANM Specification .....	5-10
5.9.2	Wiring the SD500-ANM .....	5-11
5.9.2.1	Wiring the SD500-ANM to the 5815XL .....	5-11
5.9.3	Class B Notification Configuration .....	5-11
5.9.4	Class A Notification Configuration .....	5-12
5.9.5	Configuring Flexput™ Circuits for Auxiliary Power .....	5-12
5.10	SLC Device Addressing .....	5-13
5.10.1	EEPROM Addressing .....	5-13
5.10.2	Dipswitch Addressing .....	5-14

## Section 6

### Programming Overview ..... 6-1

---

6.1	JumpStart Autoprogramming .....	6-1
6.1.1	Input Points .....	6-2
6.1.2	Output Points .....	6-2
6.1.3	Running JumpStart .....	6-2
6.2	Mapping Overview .....	6-4
6.2.1	Input Point Mapping .....	6-5
6.2.2	Output Circuit Mapping .....	6-6
6.2.3	Zone Event Mapping .....	6-7
6.2.4	Mapping LED Points .....	6-9
6.3	Silent Knight Software Suite 5650 .....	6-10
6.4	Annunciator Programming .....	6-10
6.4.1	Entering / Exiting the Program Menu .....	6-11
	To enter the Program Mode: .....	6-11
	To Exit Program Mode: .....	6-11
6.4.2	Moving through the Menus .....	6-12
6.4.3	Selecting Options and Entering Data .....	6-12
6.4.4	Editing Keys .....	6-13
6.5	Programming Menu Quick Reference .....	6-14

## Section 7

### Programming ..... 7-1

---

7.1	Modules .....	7-1
7.1.1	Edit Modules .....	7-1
	7.1.1.1 Naming Modules .....	7-2
	7.1.1.2 Module, Wiring Class .....	7-2
7.1.2	Adding a Module .....	7-2
7.1.3	Deleting a Module .....	7-3
7.2	Zone .....	7-4
7.2.1	Edit Zone .....	7-4
	7.2.1.1 Edit Zone Name .....	7-5
	7.2.1.2 Edit Zone Properties .....	7-5
	Alarm Delay Characteristics .....	7-6
	Heat Detector Sensitivity .....	7-7
	Smoke Detector Sensitivity .....	7-7
	7.2.1.3 Zone Outputs .....	7-8
	Mapping to Zone Events .....	7-8
	Example or Zone Mapping: .....	7-9
	7.2.1.4 Cadence Patterns .....	7-10
7.2.2	Add Zone .....	7-11
7.2.3	Delete Zone .....	7-11
7.2.4	View Zone Points .....	7-12
7.3	Group .....	7-13
7.3.1	Edit Group .....	7-13
	7.3.1.1 Edit Group Name .....	7-13
	Example of Group Name: .....	7-14
	7.3.1.2 Edit Group Properties .....	7-14
	Latching / Non-latching Outputs .....	7-14

Silencing Options .....	7-15
Response with System-Wide Conditions .....	7-15
7.3.2 Add Group .....	7-16
7.3.3 Delete Group .....	7-16
7.3.4 View Group Points .....	7-17
7.3.5 Edit Output Group Templates .....	7-18
7.4 Point .....	7-19
7.4.1 Point Programming For 5815XL Module .....	7-19
7.4.2 Point Programming For Internal or External Power Module (RPS-1000) 7-22	
7.4.3 Point Programming For 5880 and 5865 Modules .....	7-24
7.4.3.1 Assigning a Name to a Points .....	7-25
7.5 System Options .....	7-26
7.5.1 Reporting Account .....	7-26
7.5.1.1 Edit Accounts .....	7-27
Select Account (ID) .....	7-27
Edit Account Number .....	7-27
Select Reporting Format .....	7-28
Events to Report .....	7-28
Switch Attempts .....	7-28
Fail Attempts .....	7-29
Selecting Primary and Secondary Phone Lines .....	7-29
Telephone Number .....	7-29
7.5.1.2 Auto Test Time .....	7-30
7.5.2 Phone Lines .....	7-30
7.5.2.1 Dialing Prefix .....	7-31
7.5.2.2 Number of Answer Rings .....	7-31
7.5.2.3 Dial Option (TouchTone or Pulse) .....	7-32
7.5.2.4 Rotary Format .....	7-32
7.5.2.5 Line Monitor .....	7-32
7.5.2.6 Ground Start Relay .....	7-32
7.5.2.7 Answering Machine Bypass .....	7-33
7.5.3 Sys. Event Outputs .....	7-33
7.5.3.1 Trouble Events .....	7-33
7.5.3.2 System Alarm Cadence .....	7-34
7.5.4 Day/Night Sensitivity Time .....	7-35
7.5.5 Holiday Days .....	7-36
7.5.6 Miscellaneous Options .....	7-37
7.5.6.1 Water Flow Delay .....	7-37
7.5.6.2 Low AC Report Delay .....	7-38
7.5.6.3 Automatic Daylight Savings Adjustment .....	7-38
7.5.6.4 Clock Display Format (AM/PM or Military) .....	7-38
7.5.6.5 Change AC Line Frequency .....	7-39
7.5.7 Edit Library Name .....	7-39
7.5.8 Miscellaneous Options 2 .....	7-40
7.5.8.1 Auto Display Oldest Event .....	7-40
7.5.8.2 Report by Zone or by Point .....	7-40
7.5.9 Edit Banner Message .....	7-41
7.6 JumpStart Autoprogramming .....	7-42
7.7 Computer Account .....	7-43
7.8 Access Codes .....	7-44
7.8.1 Profile Edit Menu .....	7-45
7.8.1.1 Edit Name .....	7-45
7.8.1.2 Edit Access Code .....	7-45
7.8.1.3 Panel Functions .....	7-46

## Section 8 System Operation ..... 8-1

---

	Default Codes:.....	8-1
8.1	Annunciator Description .....	8-1
	8.1.1 LCD Displays .....	8-2
	8.1.2 Banner .....	8-2
8.2	Key Operation .....	8-2
8.3	Menu System .....	8-3
	8.3.1 Main Menu Overview .....	8-3
	8.3.2 Using the Menus .....	8-4
8.4	Basic Operation .....	8-4
	8.4.1 Setting Time and Date .....	8-4
	8.4.2 Disable / Enable a Point .....	8-4
	8.4.3 View Event History .....	8-4
	8.4.3.1 To clear the event history.....	8-5
	8.4.4 Conduct a Fire Drill .....	8-5
	8.4.5 Conduct an Indicator Test .....	8-5
	8.4.6 Conduct a Walk Test .....	8-6
	8.4.7 Conduct a Dialer Test .....	8-6
	8.4.8 Silence alarms or troubles .....	8-6
	8.4.9 Reset alarms .....	8-7
	8.4.10 Check Detector Sensitivity Through Point Status .....	8-7
	8.4.11 View Status of a Point .....	8-8
	8.4.12 View Alarms or Troubles .....	8-8
	8.4.13 View System Information .....	8-8
	8.4.14 Reset dialer .....	8-8
	8.4.15 Communicating with a Remote Computer .....	8-9
	8.4.16 Working with a Printer .....	8-10
8.5	Operation Mode Behavior .....	8-11
8.6	Releasing Operations .....	8-14
	8.6.1 Single Interlock Zone Releasing .....	8-15
	Conditions Required for an Pre-Alert Output Activation.....	8-15
	Conditions required for an General Alarm and Release Output Activation.....	8-15
	8.6.2 Double Interlock Zone Releasing .....	8-16
	Conditions Required for a Pre-Alert Output Activation.....	8-16
	Conditions Required for a General Alarm Output Activation.....	8-16
	Conditions Required for a Release Output Activation.....	8-16

## Section 9 Reporting ..... 9-1

---

9.1	Receivers Compatible with the Control Panel .....	9-1
9.2	Reporting Formats Dialer Outputs .....	9-1

## Section 10

### Testing and Troubleshooting ..... 10-1

---

10.1	Troubleshooting .....	10-1
10.2	Common Problems .....	10-1
10.2.1	Event History .....	10-2
10.3	Built-in Troubleshooting and Testing Tools .....	10-3
10.3.1	SLC Device Locator .....	10-3
10.3.2	SLC Multi Locator .....	10-4
10.3.3	I/O Point Control .....	10-5

## Section 11

### Installation Records ..... 11-1

---

11.1	SLC Point Record .....	11-1
11.2	Conventional Output Point Record .....	11-6

## Appendix A

### Compatible Devices ..... A-1

---

A.1	Two-Wire Smoke Detectors .....	A-1
A.2	Four-Wire Smoke Detectors .....	A-2
A.3	Notification Appliances .....	A-3
A.4	Door Holder Device .....	A-10

## Appendix B

### Special Characters Lists .....B-1

---

B.1	Characters used for Naming .....	B-1
-----	----------------------------------	-----

